

**IMPORTANT!**

BEFORE ASSEMBLING THIS COT READ AND UNDERSTAND THE INSTRUCTIONS. INCORRECT ASSEMBLY MAY MAKE THE COT UNSAFE. DO NOT USE THIS COT IF ANY PART IS BROKEN, TORN OR MISSING. KEEP THESE INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE.

Consumer Information



WARNING

Failure to follow these warnings and the instructions could result in serious injury or death.

- **FALL HAZARD** - To prevent falls, DO NOT use the travel cot when infant begins to push up on hands and knees, has reached manufacturer's maximum weight of 13.6 kg or height limit of 86.4 cm tall, whichever comes first.
- **SUFFOCATION HAZARD** - Infants can suffocate:
 - In gaps between an extra pad and the side of the travel cot;
 - On soft bedding;
 - NEVER add a mattress, pillow, comforter, or padding. Use ONLY the pad provided by the manufacturer.
- Never leave your child unattended.
- Do not leave anything in the cot (such as toys) that provides a foothold.
- Do not use the travel cot if the fabric on the side rails or end rails has been bitten through.
- The thickness of the mattress has been specified to ensure that the distance from the top of the mattress to the lowest side or end will be at least 500mm. This will reduce the risk of children falling out of the cot.
- Use only the pad provided by the manufacturer or one specifically designed to fit the travel cot. Pad dimensions are 980mm long x 700mm wide x 20mm thick.
- To reduce the risk of Sudden Infant Death Syndrome (SIDS), pediatricians recommend healthy infants be placed on their backs to sleep, unless otherwise advised by your physician.
- Use this product with only one child at a time.
- The mobile is intended for visual stimulation and is not intended to be grasped by the child.
- Remove mobile when baby begins to push up on hands and knees.
- Always attach all provided fasteners (strings, straps, clamps, etc.) tightly to the travel cot according to the instructions. Check frequently.
- DO NOT add additional strings or straps to the travel cot.
- DO NOT place the travel cot near trailing cables or hanging cords.
- Keep medication and small items that a child could choke on away from the travel cot.
- Make sure the wheel brakes are in the locked position when using the travel cot.



WARNING – MATTRESS SIZE

This cot is made to use a mattress which is 700mm wide, 980mm long and no more than 25mm thick. Using the wrong size mattress may create hazardous gaps that could result in suffocation or could reduce the side height of the cot which may result in your child falling out from the cot.

- Please read these instructions before assembly and use of this product.
- Adult assembly is required.
- Requires four “AA” (LR6) **alkaline** batteries for mobile operation (not included).
- Tools needed for battery installation: Phillips screwdriver (not included).
- Do not use near heat sources such as bar heaters, open fires or exposed flames.
- Product features and decorations may vary from photograph.

IMPORTANT! Before assembly or each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. DO NOT use if any parts are missing or broken. Contact manufacturer for replacement parts and instructions if needed. Never substitute parts. Make sure all locking devices are engaged.

Parts


IMPORTANT! Please remove all parts from the package and identify them before assembly.




Travel Cot




Mobile with Toys

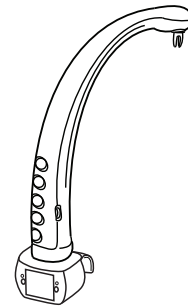


Mobile Arm

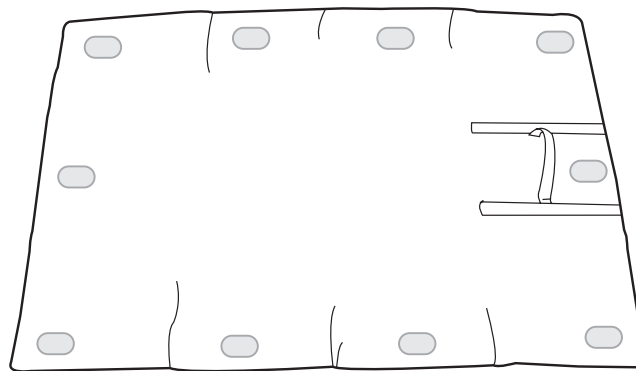

Mattress Pad

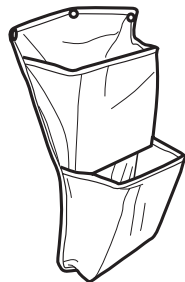


Nappy Organiser

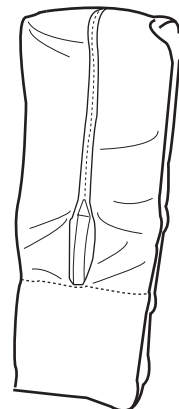


Travel/Storage Bag


Travel Cot Assembly and Use

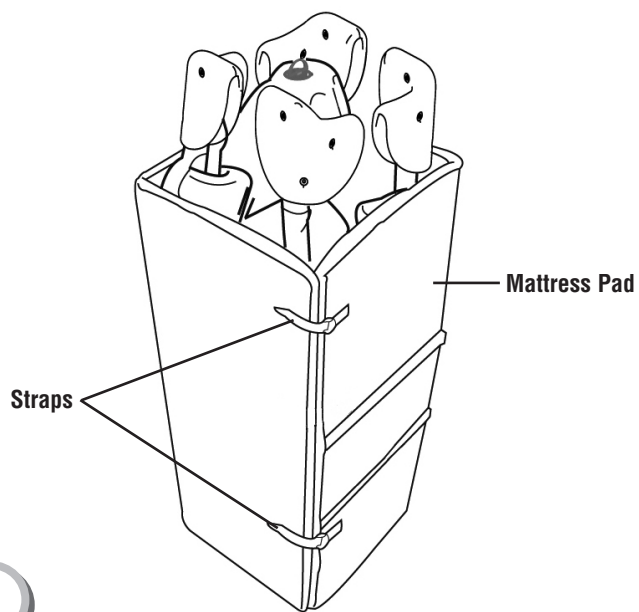

- Unfasten the straps on the mattress pad. Remove the mobile arm and mobile with toys from inside the mattress pad.

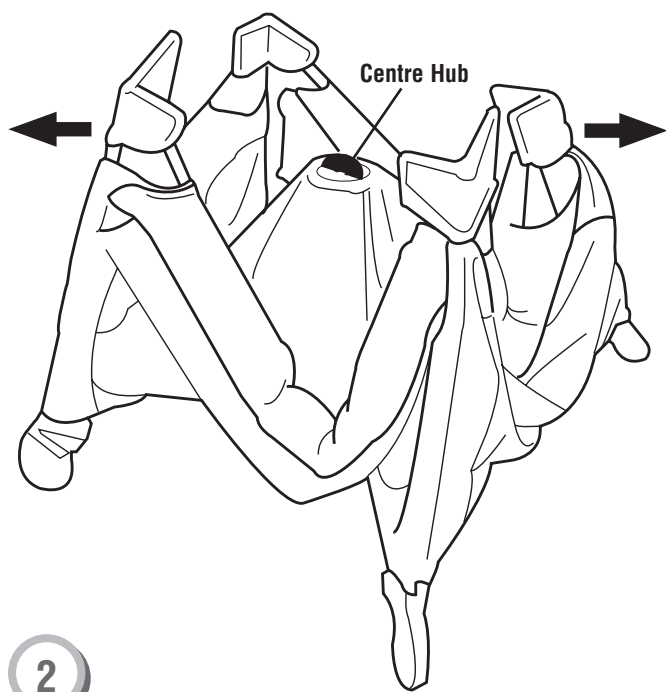


- Carefully pull the end rails out.
- IMPORTANT!** Do not push down on the centre hub. You will do this in step 4.

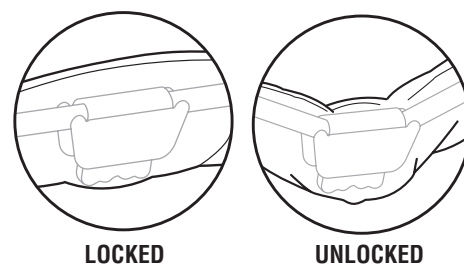


- Make sure the centre hub is raised.
- Grasp the centre of each side rail and end rail and lift to “snap” into place.

IMPORTANT! Do not push down on the centre hub until all four sides are locked into position.

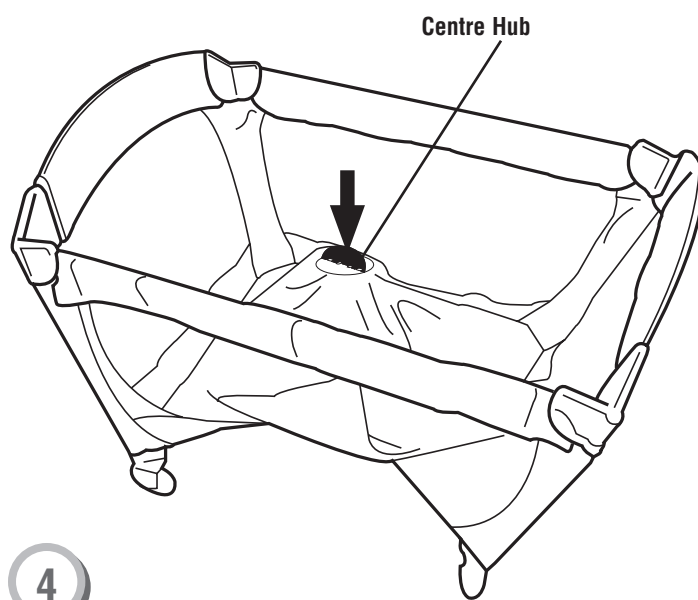


- Make sure the side rails and end rails are in the locked position.
- Push down on the centre hub.


Travel Cot Assembly and Use

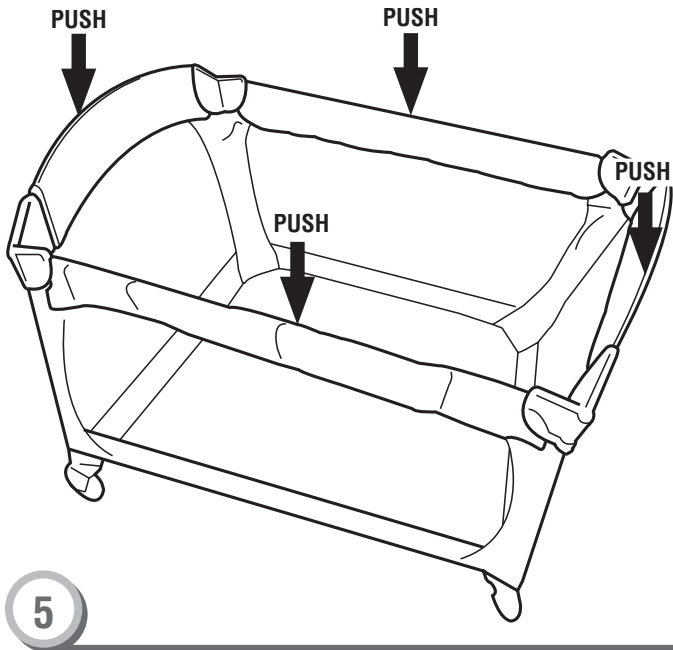


IMPORTANT! Check to be sure the travel cot frame is secure. Push down on the side and end rails.

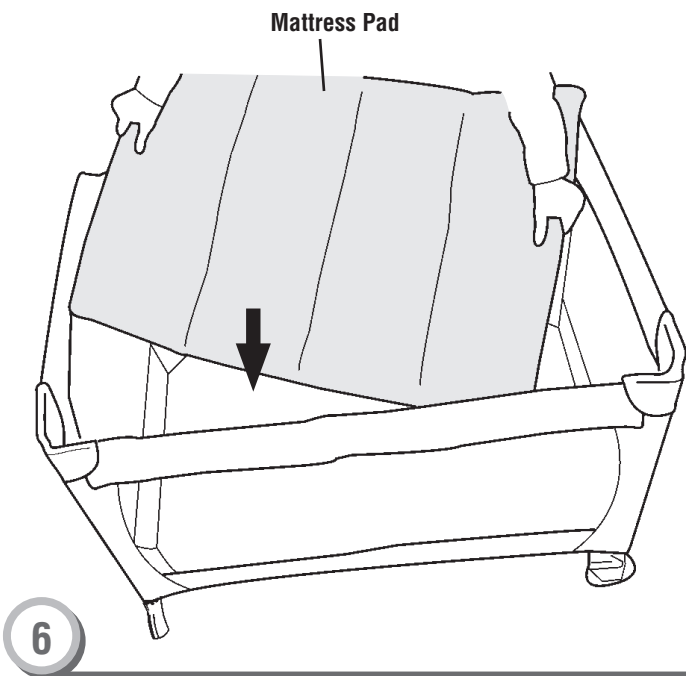

- Place the mattress pad in the travel cot.

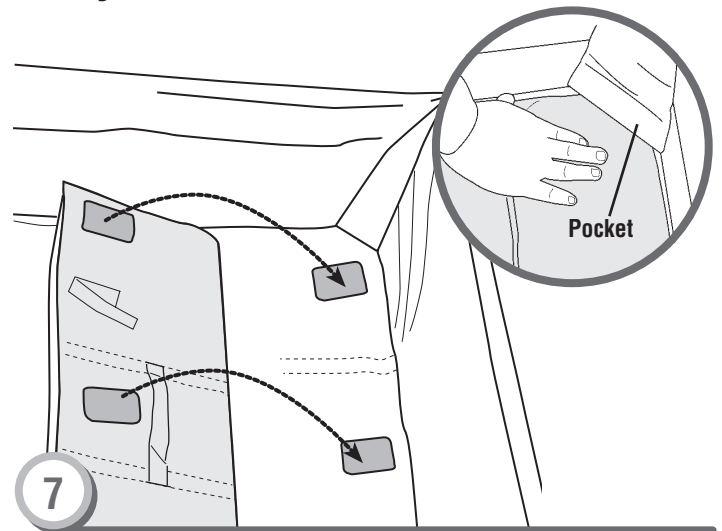

- Fit all four corners of the mattress pad into the corner pockets in the base of the travel cot.
- Push down on the mattress pad to attach all the fasteners.

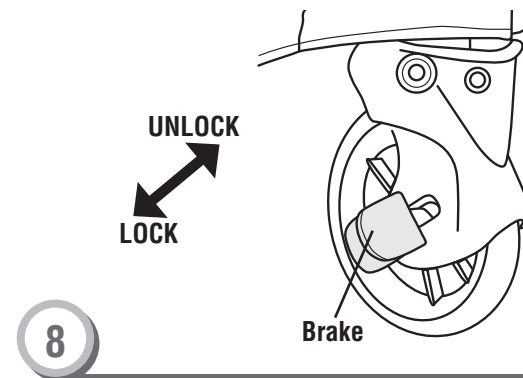


Wheel Brakes

To lock the rear wheel brakes:

- Press **both** brake pedals down until they "click" into the locked position. **Make sure the brake pedals are pressed down completely.**
- Always set both brake pedals whenever you use the travel cot.

To unlock the rear wheel brakes:

- Lift both brake pedals until they "click" into the unlocked position.

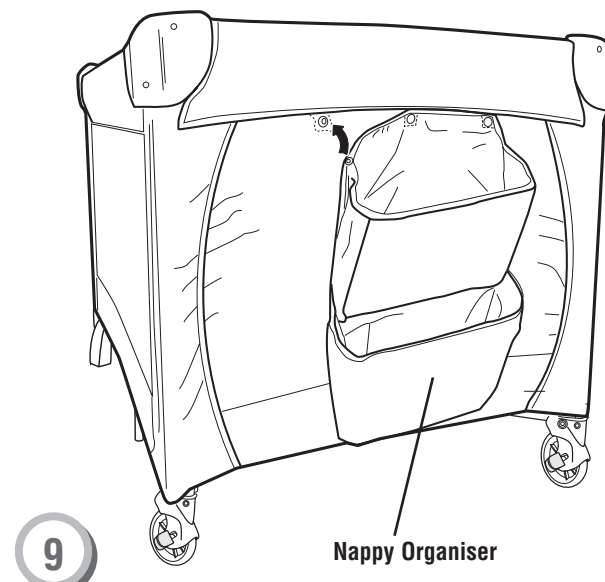

- Fasten the three snaps at the top of the nappy organiser to the end of the travel cot.


- 5 • Maximum weight limit of nappy organiser is 3.6 kg.


Mobile Assembly




WARNING

- The mobile is intended for visual stimulation and is not intended to be grasped by the child.
- Remove mobile when baby begins to push up on hands and knees.
- Always attach all provided fasteners (strings, straps, clamps, etc.) tightly to the travel cot according to the instructions. Check frequently.
- DO NOT add additional strings or straps to the travel cot.

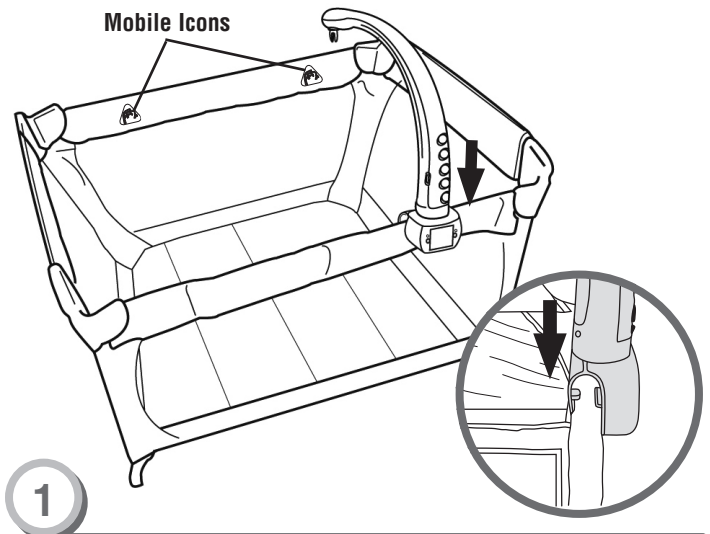


- Place the mobile arm over any mobile icon  located on the side rails.
- Push down until you hear it “snap” into the bracket located inside the side rail.

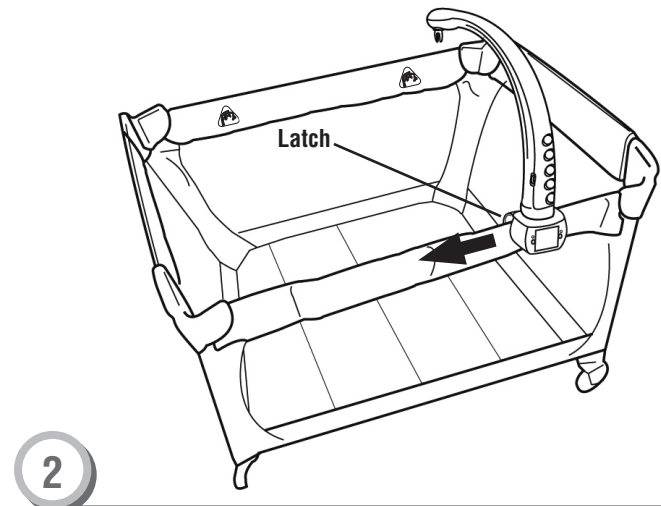



To Remove the Mobile Arm Assembly

- First pull the latch on the base of the mobile arm out and then slide the mobile arm along the side rail.
- Lift the mobile arm off the top rail.

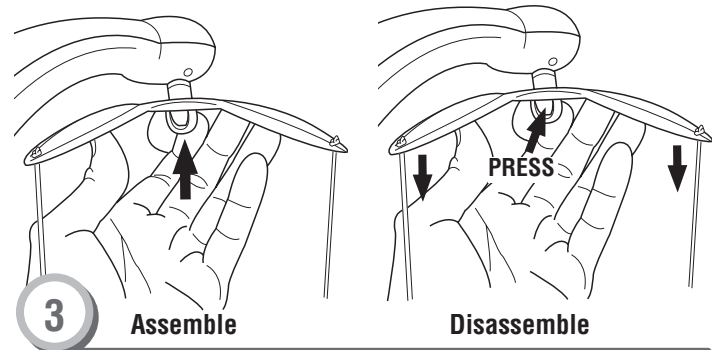

- Fit the mobile to the mobile arm. Push the mobile up firmly.
- Hint:** To disassemble the mobile for storage, press the tab on the mobile arm and pull the mobile down.

Battery Installation

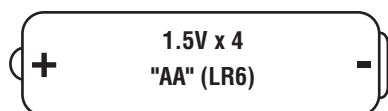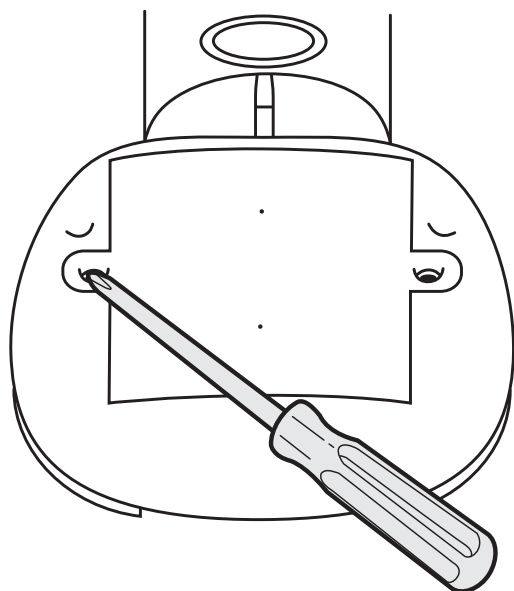

- Locate the battery compartment on the back of the mobile arm base.

Hint: We recommend using **alkaline** batteries for longer battery life.

- Loosen the screws in the battery compartment door with a Phillips screwdriver.
- Insert four "AA" (LR6) **alkaline** batteries into the battery compartment.
- Replace the battery compartment door and tighten the screws.

Note: Low battery power may cause product movement to slow, sound to become faint or product to turn off all together. If this should happen, replace the batteries with four, new **alkaline** "AA" (LR6) batteries.




- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Mobile Use

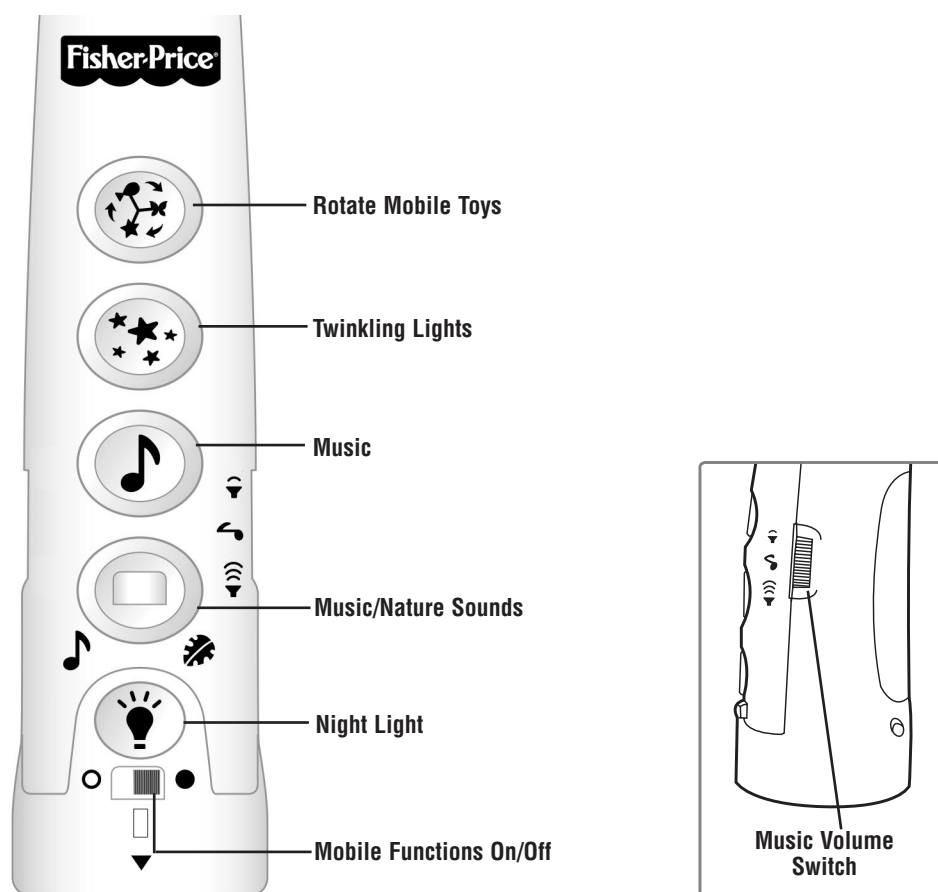

Mobile Functions On/Off Switch

- Slide the Mobile Functions On/Off switch at the base of the mobile arm to turn on power. This is the main power switch to the mobile arm and also turns on the power LED on the Night Light button. The LED will stay on in the dark.

Rotate Mobile Toys Button

- Press to begin a 5 minute cycle of rotation.
- Press again to stop the mobile.
- Press again to start a new 5 minute cycle. If this button is pressed while mobile is operating, the rotation cycle will restart.



Twinkling Lights Button

- Press to start a 5 minute light show.
- Press again to stop the light show.

Music Button

- Press to start a 5 minute cycle of music.
- Press again to stop the music.



Music/Nature Sounds Button

- Press  to play upbeat rainforest music.
- Press  to play soothing music with gentle rainforest sounds.
- Press again to stop the music or nature sounds.

Night Light

- Press to turn on mobile light for 5 minutes.
- Press again to turn light off.


Music Volume Switch

- Push towards  for high volume.
- Push towards  to low volume.


Note: If the mobile begins to operate erratically, slide the Mobile Functions On/Off switch OFF and then back ON again.

Folding the Travel Cot

Note: You must remove the mobile before folding the travel cot.

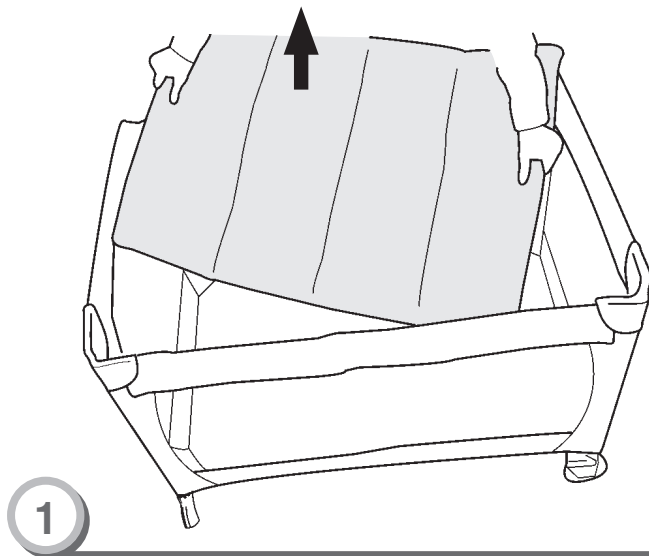



- Remove the mattress pad from the travel cot.

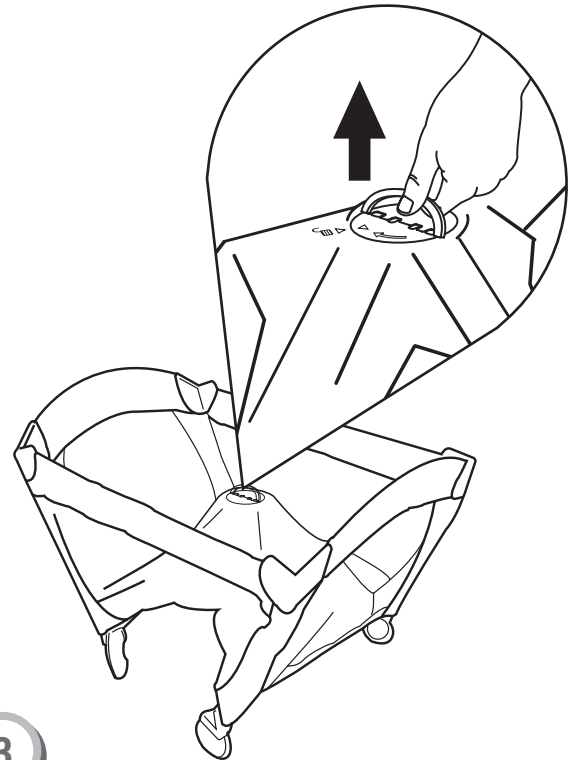

- Lift the centre hub.




- Locate the centre hub inside the travel cot.
- Turn the handle on the centre hub **clockwise**.

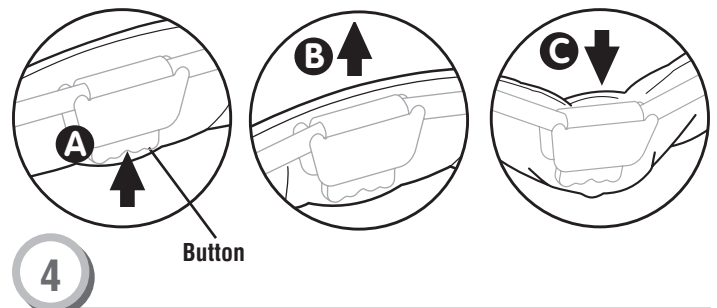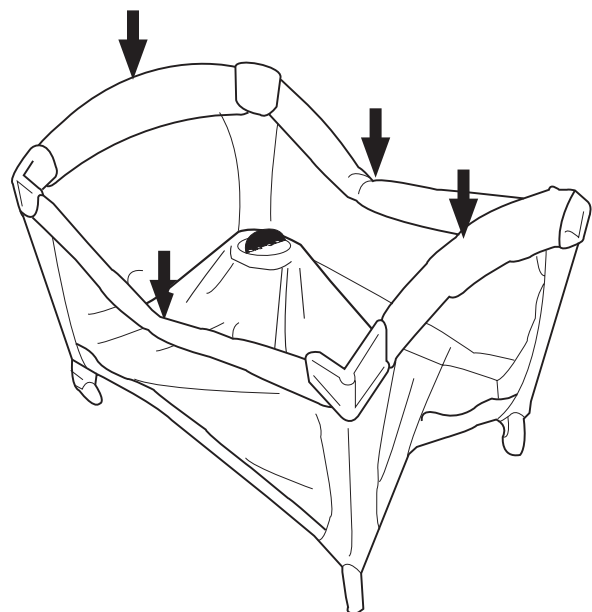

- Squeeze the button on the centre of a side or end rail **A**. Lift to release the latch **B** and then gently push down **C**.
- Note:** Latches will not release unless you squeeze button and lift up rail centre at the same time.
- Repeat this procedure to release latches on the remaining three rail centres.

Folding the Travel Cot

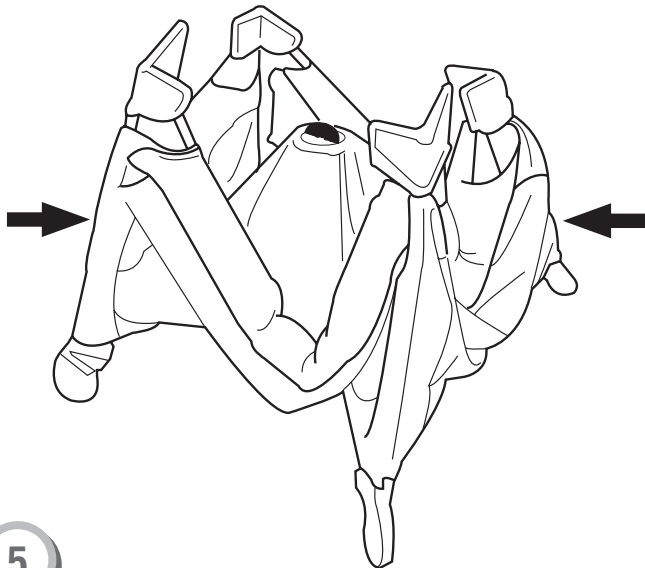


5

- Push all sides of the travel cot in toward the centre hub.

Storage/Travel Bag



- Slide the folded travel cot and mattress pad into the opening in the storage/travel bag.
- Close the zipper.

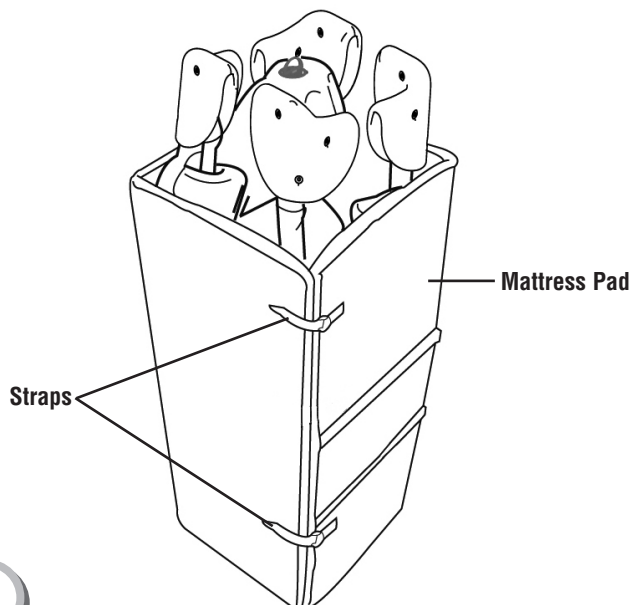

6

- Place the mattress pad on a flat surface with the soft side up.
- Place the folded travel cot on the mattress pad.
- Place the disassembled mobile and mobile arm in the mattress pad.

Hint: You must disassemble the mobile before storage in the travel bag. See page 6, step 3 for instructions on disassembling the mobile.

- Wrap the mattress pad around the travel cot.
- Fasten the straps on the mattress pad.

Care

- The frame, mattress pad, nappy dispenser, mobile, mobile arm and storage bag may be wiped clean using a mild cleaning solution and a damp cloth. Do not use bleach. Do not use harsh or abrasive cleaners. Rinse clean with water to remove residue. Do not immerse the product.

Warranty

The manufacturer warrants this product to be free from defects in material and workmanship under normal use and service following the date of purchase for 12 months. This warranty shall not apply to damage arising from neglect, incorrect assembly, accidental damage to, or misuse of the product. Attempts to repair the unit other than by a C.O. White representative are not covered under this warranty. Where a failed component is replaced under warranty, the balance of the original warranty will remain effective. The replaced component does not carry a new warranty. This warranty is only valid to the original purchaser and is not transferable in any way.

FISHER-PRICE and RAINFOREST are owned by Mattel, Inc. and used under license from
Mattel Europa B.V. ©2009 Mattel, Inc. All Rights Reserved.

Manufactured by:

C.O. White Pty Ltd

20 Calarco Drive, Derrimut, VIC 3030

MADE IN CHINA

Customer Service Number: 1300 667 137

e-mail: info@cnpbrands.com.au

www.cnpbrands.com.au